SKIP*HOP®


Soporta hasta **36.3 kg** (80 lbs)

kid chairs


Read all instructions before assembly and use of the Kid Chairs.

IMPORTANT! KEEP FOR FUTURE REFERENCE.


CONTENTS:

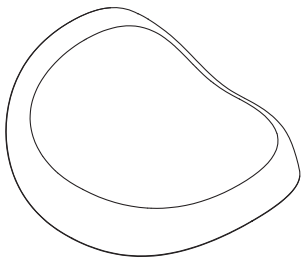

Seat (x2)

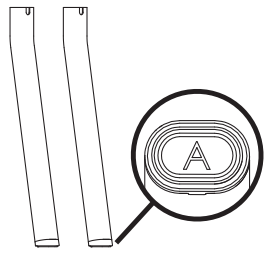

Front Legs – A (x4)

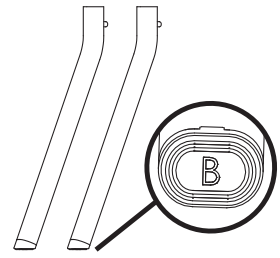


Back Legs – B (x4)


CLEANING AND CARE:


Wipe clean with a damp cloth.

INSERT LEGS: **Adult Assembly Required.**

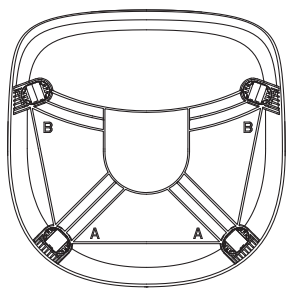

SEAT BOTTOM VIEW

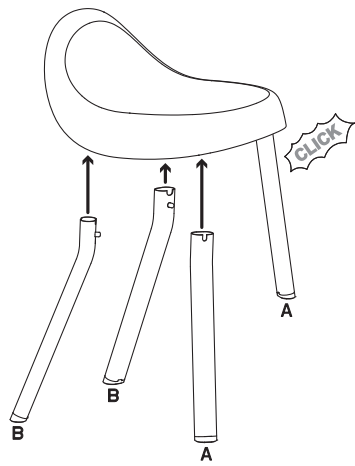

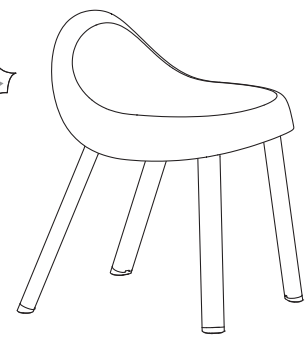

FULLY ASSEMBLED

⚠WARNING: Assembly to be carried out by a competent adult only. Never leave child unattended. During assembly children should be kept away from the product due to possible risk of injury. Improper assembly can result in damage to your chair or cause harm to your child. Product shall only be used by children who can sit up unassisted. Fall Hazard: Do not use as a step stool or near windows. DO NOT place this product near a window as it can be used as a step by the child and cause the child to fall out of the window. Be aware of the risk of open fires and other sources of strong heat in the vicinity of the product. DO NOT place this product near a window where cords from blinds or curtains could strangle a child. Do not to use the chair if any part is broken, torn or missing and use only spare parts approved by Skip Hop. Regularly check all fastenings to ensure that they properly attached.

Age 12 months to 5 years. Not intended for Adult use.



DO NOT STAND ON CHAIR

© Skip Hop, Inc.
SKIP HOP and MUST-HAVES MADE BETTER are trademarks owned by Skip Hop, Inc. All rights reserved.

100 W 33 ST, STE 1125, NY, NY 10001
In the US: 888.782.9548
www.skiphop.com

303400.04